

Godrej

ADVANTIS

DIGITAL CABINET LOCK

Think Safety, Think Godrej Locks.


The default Owner code is 123456.
Please change to a new password.
Make sure you do not use consecutive or repetitive numbers for your locker.

Before Operation


The locker has 3 levels of permission: Top level: Owner code *1. Secondary level: Master code *1. Service code *1 Basic level: Temporary code *1. User code *10
Working mode: Public mode & Private mode.
All codes can be copied to other locker by the 1996 1B card, except the Temporary code.
All codes must be set as 4-9 digits.
It will not automatically lock after the Owner code, Master code and Temporary code are unlocked.
It will automatically lock after the User code and Service code are unlocked.

Product Components

The product components may change depending on the installation environment.

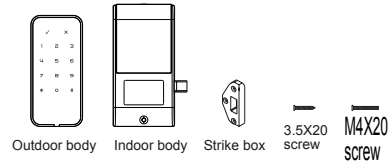

Reset Pins of Indoor Body

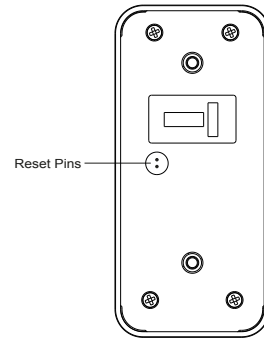

A

4. Enter new Service code (4-9 digits) + #
New Service code (4-9 digits) + #

5. Then locker will make 3 beep sounds and light will flash.
Service code set/ changed successfully.
🔊 + 💡

E. Set/ Change user code by Owner code

1. Touch the keypad and enter two random codes.
🔊 + Two random codes
2. Enter * + 3 + #
* + 3 + #
3. Enter Owner code + #
Owner code + #
4. Enter ID number (01-10) + #, Enter new Service code (4-9 digits) + #
ID number (01-10) + # + New Service code (4-9 digits) + #
5. Enter new permanent code (4-9 digits) + #
New user code (4-9 digits) + #

6. Then locker will make 3 beep sounds and light will flash.
User code set/ changed successfully.
🔊 + 💡


F. Change Master code by Master code

1. Touch the keypad and enter two random codes.
🔊 + Two random codes
2. Enter * + 6 + #
* + 6 + #
3. Enter Master code + #
Master code + #
4. Enter new Master code (4-9 digits) + #
New Master code (4-9 digits) + #
5. Then locker will make 3 beep sounds and light will flash.
Master code set/changed successfully.
🔊 + 💡


5

UM-292 A

Names of Individual Parts (Outdoor Body)

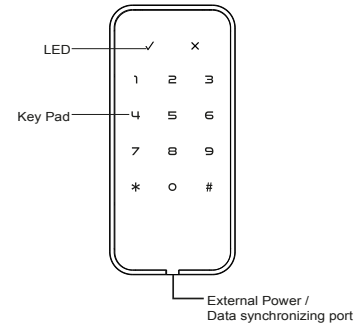

Names of Individual Parts (Indoor Body)

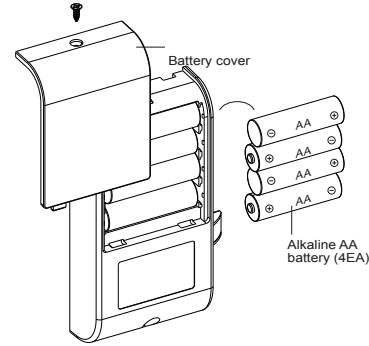

Setting

A. Reset

Press the reset button of PCB and hold until the white light is bright and you hear 3 beep sounds after resetting. All codes will be deleted and the Owner code will revert to 123456 and in public mode.

2

3

B. Change Owner code

1. Touch the keypad and enter two random codes.
🔊 + Two random codes
2. Enter * + 1 + #
* + 1 + #
3. Enter Owner code + #
Owner code + #
4. Enter new Owner code (4-9 digits) + #
New Owner code (4-9 digits) + #
5. Then the locker will make 3 beep sounds and light will flash.
Owner code has been changed successfully.
🔊 + 💡

C. Set/ Change Master code by Owner code

1. Touch the keypad and enter two random codes.
🔊 + Two random codes
2. Enter * + 2 + #
* + 2 + #
3. Enter Owner code + #
Owner code + #
4. Enter new Master code (4-9 digits) + #
New Master code (4-9 digits) + #
5. Then the locker will make 3 beep sounds and light will flash.
Master code set/ changed successfully.
🔊 + 💡

D. Set/ Change Service code

1. Touch the keypad and enter two random codes.
🔊 + Two random codes
2. Enter * + 99 + #
* + 99 + #
3. Enter Owner code + #
Owner code + #

4

G. Set/ Change user code by Master code

1. Touch the keypad and enter two random codes.
🔊 + Two random codes
2. Enter * + 7 + #
* + 7 + #
3. Enter Master code + #
Master code + #
4. Enter ID number (01-10) + #, Enter new user code (4-9 digits) + #
ID number (01-10) + # + New user code (4-9 digits) + #
5. Then locker will make 3 beep sounds and light will flash.
User code set/ changed successfully.
🔊 + 💡

Delete code

A. Delete user code by Owner code

1. Touch the keypad and enter two random codes.
🔊 + Two random codes
2. Enter * + 5 + #
* + 5 + #
3. Enter Owner code + #
Owner code + #
4. Enter corresponding ID number (01-10) + #, which you want to delete.
Corresponding ID number (01-10) + #
5. Then locker will make 3 beep sounds and light will flash.
User code deleted successfully.
🔊 + 💡

6

B. Delete Master code

1. Touch the keypad and enter two random codes.
🔊 + Two random codes
2. Enter * + 4 + #
* + 4 + #
3. Enter Owner code + #
Owner code + #
4. Then locker will make 3 beep sounds and light will flash.
Master code deleted successfully.
🔊 + 💡

C. Delete Service code

1. Touch the keypad and enter two random codes.
🔊 + Two random codes
2. Enter * + 00 + #
* + 00 + #
3. Enter Owner code + #
Owner code + #
4. Then locker will make 3 beep sounds and light will flash.
Master code deleted successfully.
🔊 + 💡

D. Delete user code by Master code

1. Touch the keypad and enter two random codes.
🔊 + Two random codes
2. Enter * + 5 + #
* + 5 + #
3. Enter Master code + #
Master code + #
4. Enter corresponding ID number (01-10) + #, which you want to delete.
Corresponding ID number(01-10) + #
5. Then locker will make 3 beep sounds and light will flash.
User code is deleted successfully.
🔊 + 💡

7





Switch Mode

A. Set Public mode





1. Touch the keypad and enter two random codes.
🔊 + Two random codes
2. Enter * + 88 + #
* + 88 + #
3. Enter Owner code + #
Owner code + #
4. Then locker will make 3 beep sounds and light will flash.
Public mode set successfully.
🔊 + 💡

8

B. Set Private mode





1. Touch the keypad and enter two random codes.
 + **Two random codes**
2. Enter * + 77 + #
 + **77** + **#**
3. Enter Owner code + #
Owner code + **#**
4. Then you will hear 3 beep sounds and light will flash.
Private mode is set successfully.
 + 

C. Set silence mode





1. Touch the keypad and enter two random codes.
 + **Two random codes**
2. Enter * + 11 + #
 + **11** + **#**
3. Enter Master code + #
Master code + **#**
4. Then locker will make 3 beep sounds and light will flash.
Non-silence mode set successfully.
 + 

Lock/ Unlock





A. Unlock with Owner code or Master code

1. Under the lock status, Touch the keypad and enter two random codes.
 + 
2. Enter Owner/ Master code + #
Owner/ Master code + **#**
3. Locker will unlock while making 1 beep sound.
 + 





B. Lock with Owner code or Master code

1. Under the unlock status, touch the keypad and enter two random codes.
 + 
2. Enter Owner/ Master code + #
Owner/ Master code + **#**
3. Locker will lock while making 1 beep sound.
 + 





C. Lock with Temporary code (under public mode)

1. Under the unlock status in public mode, touch the keypad and enter two random codes.
 + 
2. Enter Temporary code + #
Temporary code + **#**
3. Locker will lock while making 1 beep sound.
 + 





D. Unlock with Temporary code (under public mode)

1. Under the lock status in public mode, touch the keypad and enter two random codes.
 + 
2. Enter Temporary code + #
Temporary code + **#**
3. Locker will unlock while making 1 beep sound.
 + 





E. Lock with User code (under private mode)

1. Under the unlock status in public mode, touch the keypad and enter two random codes.
 + 
2. Enter User code + #
User code + **#**
3. Locker will lock while making 1 beep sound.
 + 





F. Unlock with User code (under private mode)

1. Under the lock status in public mode, touch the keypad and enter two random codes.
 + 
2. Enter User code + #
User code + **#**
3. Locker will unlock while making 1 beep sound.
 + 

G. Lock with Service code (under public mode)

1. Under the unlock status in public mode, touch the keypad and enter two random codes.
 + 
2. Enter Service code + #
Service code + **#**
3. Locker will lock while making 1 beep sound.
 + 

H. Unlock with Service code (under public mode)

1. Under the lock status in public mode, touch the keypad and enter two random codes.
 + 
2. Enter Service code + #
Service code + **#**
3. Locker will unlock while making 1 beep sound.
 + 

9

10


11

12

NOTE

Emergency Power Back-up

In case the batteries run out completely, please insert the 9V power backup-battery-case to the emergency socket or connect 9V battery to the electric-pole. Then unlock the lock. (Socket available with additional charges.)

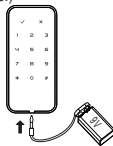

Programming Guide

List	Description
* + 1 + #	Change Owner code
* + 2 + #	Set/ Change Master code by Owner code
* + 3 + #	Set/ Change User code by Owner code
* + 4 + #	Delete Master code
* + 5 + #	Delete User code by Owner code
* + 6 + #	Change Master code by Master code
* + 7 + #	Set/ Change User code by Master code
* + 0 0 + #	Delete Service code
* + 1 1 + #	Set silence mode
* + 5 5 + #	Synchronizing information (IB key to Locker)
* + 6 6 + #	Synchronizing information (Locker to IB key)
* + 7 7 + #	Set Private mode
* + 8 8 + #	Set Public mode
* + 9 9 + #	Set/ Change Service code

Godrej | LOCKS

THINK SAFETY, THINK GODREJ.

Godrej & Boyce Mfg. Co. Ltd.
Locking Solutions and Systems Division,
Plant 18 A, Pirojshanagar, Vikhroli,
Mumbai - 400079. India.
Tel : +91-22-6796 4890
Fax: +91-22-6796 1510-11
Email: locksmkt@godrej.com
Website: www.godrejlocks.com