



Safety Cautions


- Please read thoroughly before operating the product.
- For security, the passwords should be changed on a regular basis.
- When the batteries are inserted in reverse positions, it may result in liquid leakage or rupture.
- When the batteries are flat, all the batteries should be replaced; do not use new batteries with used ones.
- Do not install, disassemble or repair without the assistance of a product repair technician.
- Use a soft and dry cloth to clean the product.
- Do not press or insert the buttons with pins.
- Do not use the product for any purpose other than a digital door lock.
- Do not to let water get into the product.
- Do not subject the product to any severe impact.

Product Components

The product components may change depending on the installation environment.



Outdoor Body

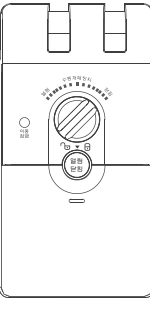


Indoor Body

- User Manual
- Installation Manual
- 'AA' Batteries (LR6) 4 EA
- Striker Screws
- Remote Control (Sold separately)
- Video Door Phone (Sold separately)


Caution

This product does not have a mechanical key. It has to be destroyed during emergency or when it malfunctions. Please acknowledge directions to open manually beforehand.

Names of Individual Parts (Outdoor Body)

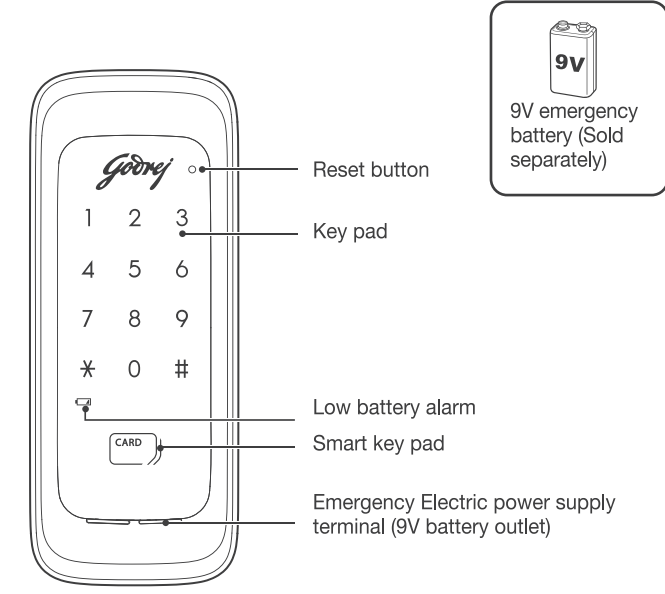

Names of Individual Parts (Indoor Body)

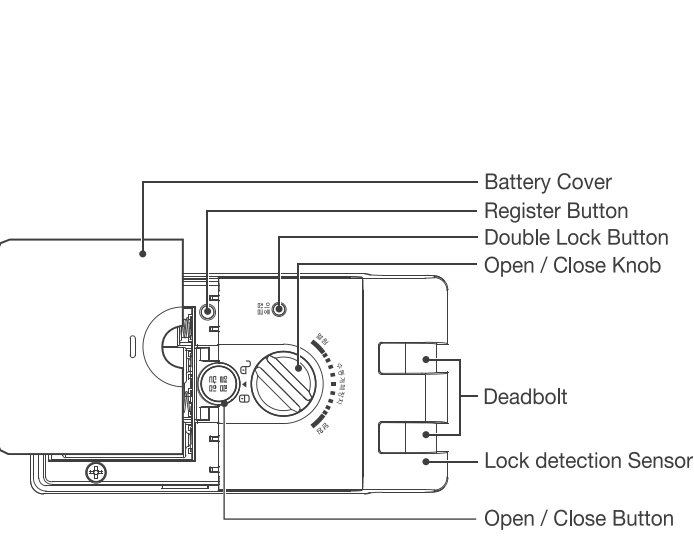

Enter into Registration Mode

1. Press [R] button.
2. Enter Master Password. ("The initial master password is '1234'.")
3. Press [#] Button.

NOTE: 1. Registration will be canceled if there is no input for 10 seconds. 2. Registration will be canceled with alarm if the password is less than 4 digits or over 13 digits. 3. Registration will be canceled if [#] is pressed without any number or [Register] button is pressed.

Register Password

* Make sure to register only when the door is open.

Change Master Password: [R] - [0] - [M] - [*] | [M] Enter 4-12 digits for new master password 4-12

* Master password must be different from user/guest password.

Register User Password: [R] - [U] - [*] | [U] Enter 4-12 digits for new user password 4-12

* Users can register up to 4 different passwords by repeating, before the keypad lamp goes out. * User password must be different from administrator/guest password.

Register One-time Password: [R] - [O] - [*] | [O] Enter 4-12 digits for new one-time password 4-12

* One-time password must be different from administrator/user password. * One-time password will expire once the door is unlocked using it.

NOTE: 1. Registration will be canceled if there is no input for 10 seconds. 2. Entering [#] button without any number or pressing [Register] button will cancel the registration process.

How to Register/Change Smart Keys

(*Please open the door, when registering)

1. Tag the smart key onto the smart key touch pad. (Check for a beep sound every time a new smart key is registered.)
2. Registration button

CAUTION: 1. Even you register new smart cards, the already registered cards will not be deleted. 2. To register multiple cards, please repeat the process above. (Up to 100 smart cards you can register.) 3. During the registration process, pressing [#] or [R] button will cancel the process. 4. Only the smart cards inside of the product box are authorized; other cards (e.g. transportation cards) might not work. 5. After pressing [2] button, tag the smart keys within 10 seconds, otherwise the registration process will be canceled.

Delete mode

1. Press [R] button for 3 seconds.
2. Enter Master Password (Only master password can access to this mode.)
3. Press [#] Button.

NOTE: 1. Delete mode will be canceled if there is no input for 10 seconds. 2. Delete mode will be canceled with alarm if the password is less than 4 digits or over 13 digits. 3. Delete mode will be canceled if [#] is pressed without any number or [Register] button is pressed.

Delete Password

Delete all User Password: [D] - [1] - [*] | [1] Beep Press and hold for 3 seconds

Delete One-time Password: [D] - [4] - [*] | [4] Beep Press and hold for 3 seconds

How to Delete Smart Keys

[D] - [2] - [*] | [2] Beep Press and hold for 3 seconds

Open from Outside

* Password: 1. Touch the keypad and input administrator/user/guest password.

2. Press [#] button.

NOTE: 1. Authorization will be canceled if there is no input for 10 seconds. 2. Use random number function if you are worried about exposure. 3. Repeat will be locked for 1 minute with an alarm if wrong password is entered 5 consecutive times. Wait for 1 minute and rely once the keypad is unlocked. 4. Guest password will expire once the door is unlocked using it.

Opening from Outside (with Smart Keys)

In Automatic Sensing Setting: Tag the smart key pad with a registered smart key (see page 11).

In Manual Sensing Setting: Touch the number plate, and when the lamp on the number plate lights up, tag the smart key pad with a registered smart key (see page 11).

Open from Outside (Random Number Function)

Touch the number plate and then enter any numbers before entering the registered password and then press [#] or after entering a registered password, enter any number and press [#]. The door will open with a beep sound.

NOTE: Entering the random number will be useful when concerned about possible exposure of the password. (When more than 20 digits including both the password and the random numbers are entered, an error alarm will sound, and the numbers will need to be entered again.)

Open from Inside

Normal Mode: Unlock by pressing [OPEN/CLOSE] button on the indoor body.

Child Lock Mode: Turn the manual OPEN/CLOSE knob on the indoor body.

Lock from Outside

In Auto Lock Mode: The door will be automatically locked in 3 seconds after it is closed.

In Manual Lock Mode: Touch the keypad or touch the keypad and press [5] button while the door is closed. (Refer page no. 8)

Video Door Phone/Remote Control Function

* Receiver module/remote control/video door phone sold separately

Register video door phone/remote control: [R] - [V] - [*] | [V] Beep Press and hold for 3 seconds

* Users can register up to 5 different video door phone/remote controls repeating [V] or [V]

Delete all video door phone/remote control: [D] - [V] - [*] | [V] Beep Press and hold for 3 seconds

* Pre-registered video door phone/remote control will be removed when newly registered.

Deadbolt Alarm

While opening/closing the door and the deadbolt does not operate properly, the alarm will ring 3 times in a row.

CAUTION: 1. If the alarm continues to ring or the product does not function properly, the position of the door lock needs to be adjusted. 2. Under the circumstance, contact your nearest locksmith for assistance.

Low Battery Alarm

When the alarm sounds while the door lock operates normally, the batteries need to be replaced.

(When the flat batteries are not replaced, the door lock will stop functioning.)

CAUTION: 1. When the batteries are flat, all of them need to be replaced. 2. Do not mix used batteries with new ones. (Do not mix batteries with different manufacturers.)

Lock from Inside

Auto Mode: The door will be automatically locked after it is closed.

Manual Lock Mode: Press [OPEN/CLOSE] button while the door is closed.

Child Lock

Disables [OPEN/CLOSE] button on the indoor body

Set Child Lock: [P] - [Password] - [1] - [0] | [1] Beep Touch the number plate * Except guest password.

Remove Child Lock

It could be disabled by entering password, recognizing smart card or turning manual knob from the inside.

Privacy Function from Inside

Can not open from outside

Set Privacy Function: Press double lock button for 3 seconds while the door is locked.

Remove Privacy Function

Press [OPEN/CLOSE] button or turn the manual OPEN/CLOSE knob.

Lock Settings

Automatic Lock Setting: [L] - [Password] - [H] - [Twice] - [4] | [4] Beep

* Except guest password. * Door will not be automatically locked after 2 seconds when it is closed.

Manual Lock Setting: [L] - [Password] - [H] - [Twice] - [7] | [7] Beep

* Except guest password. * Door will not be locked under manual lock setting while the door is closed.

NOTE: Default setting is automatic lock. In manual lock setting, select mode to lock the door lock by touching keypad / lock by pressing [H] button setting: [L] - [Password] - [H] - [Twice] - [9] | [9] Beep Toggle setting * Except guest password.

Use of the Emergency Battery

When the batteries are completely flat that the product cannot function properly, purchase an emergency battery (9V).

1. Connect the battery to the emergency electric power terminal.
2. Touch the key pad and then enter the password. (Touch the key pad only when the key pad is not lit)
3. Press the [1] button and with a beep sound, the product will be unlocked.

High Temperature Alarm

If the product senses a high temperature with a risk of fire (82 °C ± 5 °C), an alarm will sound in high volume to ensure safety and the door will be unlocked automatically.

CAUTION: 1. If the indoor body is exposed to direct sunlight for many hours, the temperature sensor might become active, and the alarm may go off. 2. Even if the door is set to "Child lock & Privacy function", the door will unlock automatically. 3. When the door lock reaches a high temperature, it will automatically unlock itself.

Prank Prevention Alarm and 1-minute Suspension

When unregistered password or Smart key is entered 5 times consecutively, the door will not function for 1 minute with an alarm.

Smart Key Automatic/Manual Sensing Settings

This function is designed to sense the smart keys automatically/manually.

Automatic Sensing Settings: [S] - [Password] - [H] - [Twice] - [1] | [1] Beep

(Twice in a row)

Manual Sensing Settings: [S] - [Password] - [H] - [Twice] - [3] | [3] Beep

(Twice in a row)

NOTE: 1. With Automatic Sensing settings, the lock will open by tagging the smart key on the smart pad. 2. With Manual Sensing settings, touch the number plate to illuminate the numbers and then tag the smart key to open. * Default setting is Automatic Sensing.

Volume Control

The volume can be adjusted when the door is locked.

Increase Volume: [V] - [Password] - [H] - [Twice] - [3] | [3] Beep

Decrease Volume: [V] - [Password] - [H] - [Twice] - [6] | [6] Beep

NOTE: There are total 7 levels of volume

Temporary Mute Function

Touch the number plate on the outdoor body, press the [5] button and then enter the password or put smart key for a temporary (once) mute function.

NOTE: When the temporary mute function is activated, the number plate will flicker with each touch.

Trouble Shooting

Trouble	Solution
Cannot turn on the keypad.	Please check the direction the batteries that are inserted and check polarity. Please replace all 4 of the batteries (alkaline). Please check the battery status and/or the whether the battery is flat.
Cannot change password.	Touch the "Registration" button with a short beep sound. Refer to how to Register and/or Change password in the user manual.
Cannot open door even after entering the password with the [1] button touched.	Check whether the password is entered correctly. If the number plate lights are out while entering the password, the buttons cannot be touched. Scan the number plate once again to illuminate and then enter the password once again.
Registered information can be verified with the password/smart keys but the door does not open.	Use 9V emergency battery (alkaline battery) for one more attempt. The door lock might be malfunctioning/contact technicians for assistance.
When being used, the product keeps making the beeping sounds.	The alarming sound signals battery replacement. When there is the beeping sound, replace all the batteries (alkaline) with new ones.
Door does not lock automatically.	Please reset to auto lock mode. When the batteries are flat, the product will only make sounds but does not function. Please replace all 4 batteries (alkaline).

FRONT

BACK

Final Output for Print



K

Offset Print Single Colour

Paper: Matte Finish Art Paper(White) 110 GSM


Note:

1. Artwork is only for development, not for production. For production please refer C0 graphic artwork.
2. Artwork is in 1:1

Die Cut Mark



Fold Mark

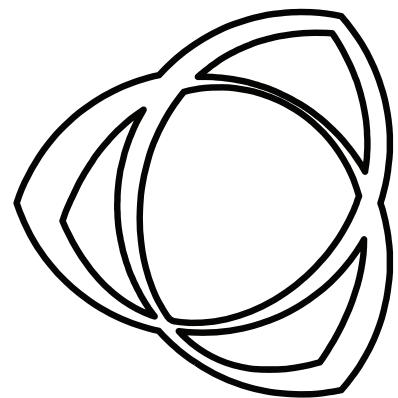 Futuring Design Pvt. Ltd.	NAME	FUTURING DESIGN PVT. LTD.
	CLIENT	GODREJ LOCKING SOLUTIONS AND SYSTEMS
	PROJECT NAME	ADVANTIS RIMTRONIC VERTI
	DESCRIPTION	ADVANTIS RIMTRONIC VERTI OWNERS MANUAL ARTWORK D0
	DATE	27/04/2019