

Low Battery Alarm

- 3 Beeps and 3 flashes of light

Anti-Prank Alarm

- When the password is wrong for 3 times, there will be light flashing with alarm sound. The keypad will be locked for 180 seconds.

Reset Lock

- To reset the lock, remove the lock from door and long press the reset button on back side of front body for 3 sec, 3 short beeps, the screen flashes 3 times.

(Recommended to operate Reset function with the guidance of service technician).

After Reset

- Lock is restored to factory state.
- Master password is set to 123456
- All user passwords are deleted.

Product Specification

Item		Specification
Condition of Installation	Door Thickness	35mm ~ 65mm
Opening Method	Password	4-9 Digit. Upto 99 can be registered
Rated Voltage	DC 6V	LR6 1.5V AA size alkaline battery x 4EZ
Emergency Electric Power	Micro USB	Power bank with USB can be used in case of battery drain.
Material	Aluminium Alloy + Plastic	

Sound and Light Prompt

Event	Lock Response
Unlock / Correct Setting	1 long beep and screen flashes once
Lock	2 short beeps and screen flashes once
Incorrect Entry/ Error Operation	1 short beep and screen flashes once
3 Times Wrong Password Entry	3 long beeps and the screen flashes 3 times
Low Voltage	6 beeps and 6 flashes of Red LED
Power ON	1 long beep followed by 3 short beeps and screen flashes once



Godrej & Boyce Mfg. Co. Ltd.

Locking Solution and System Division, Plant 18, Pirojshanagar, Vikhroli,
Mumbai-400076, India.
Website: www.godrejlocks.com

Consumer Care Cell: Sr. Executive- Godrej & Boyce Mfg. co. Ltd.
Plant 18, Pirojshanagar, vikhroli, Mumbai-400076, India,
Tel: (office) 022-67694890 E-mail: locksmkt@godrej.com



Scan for Godrej website

**24 HOUR TOLL FREE
HELP LINE NO.*
1800 209 45 43**

**ALL MOBILES AND LANDLINES
REACHABLE FROM MORE THAN 200 CITIES ACROSS INDIA
TEL: 022-67694890 (Standard charges applicable)
NOW on WHATSAPP: +91 9321665511**
*conditions apply

Product Disposal

Please Note that product should not be disposed off with other household waste at the end of their working life. To prevent possible harm to environment or human health from uncontrolled waste disposal, please instruct the metal scrap dealer to dismantle the product and segregate different materials for recycling and reuse.

**The contents of this owner's manual are subject to change without prior notice in order to enhance performance of the product.*



1 2 3
4 5 6
7 8 9
* 0 #

OWNER'S MANUAL

 
Password
Mechanical Key

**The default master code is 123456
please change to a new password.
Make sure you do not use
consecutive or repetitive numbers.**


Safety Cautions

- Please read User manual thoroughly before operating the product.
- For security, the passwords should be changed on a regular basis.
- When the batteries are inserted in reverse positions, it may result in liquid leakage or rupture.
- When the batteries are flat, all the batteries should be replaced; do not use new batteries with used ones.
- Do not install, disassemble, or repair without the assistance of Technician.
- Use a soft and dry cloth to clean the product.
- Do not press or insert the buttons with pins.
- Do not use the product for any purpose other than a digital door lock.
- Do not let water get into the product.
- Do not subject the product to any severe impact.


Product Components

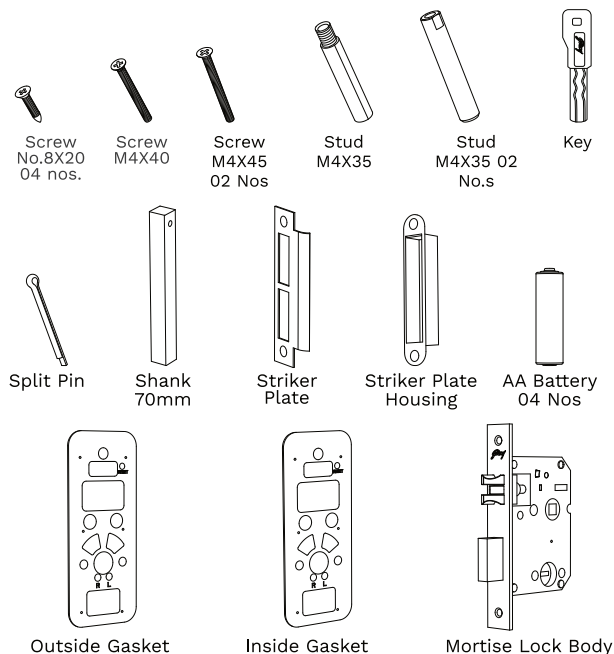

 Names of Individual Parts (Outside Body)

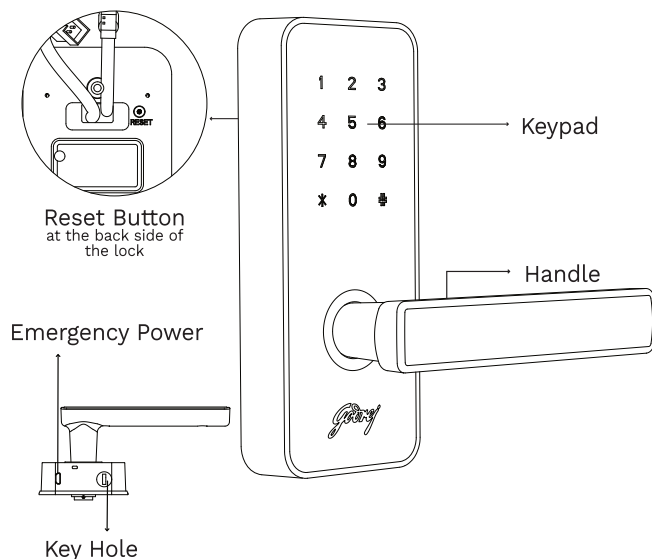

Names of Individual Parts (Inside Body)

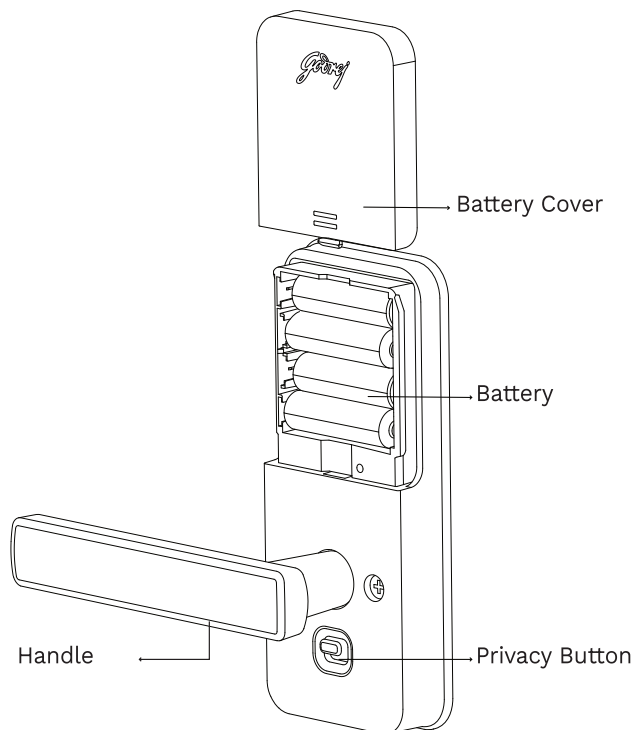 

Register Master Password and User Password

How to Change Master Password

- Enter Default Master Password (123456) #
- 4 # New Master Password (6 digits) #
- New Master Password (6 digits) #

How to Register User Password

- Enter Master Password # 1 # 1 # ID (02 to 99) #
- User Password (4 to 9 digits) #
- User Password #

Delete User Password

How to Delete User Password

- Enter Master Password # 2 # 1 # ID (02 to 99) # ID (02 to 99) #

Delete All User Passwords

How to Delete All User Password

- Enter Master Password # 3 # 1 # Master Password #

Set Auto-Lock Time

The self-locking function is to re-lock after specified time (3-30 seconds) after unlocking. (default time is 5 second)

- Enter Master Password # 5 # time (3-30) # Master Password #

Note: 3~9 seconds, you can directly input 3,4,5....., no need for 03, 04, 05.

Enable and Disable Privacy Mode

How to Enable Privacy Mode

- Switch on back cover plate need to set

How to Disable Privacy Mode

- Switch on back cover plate need to reset manually or
- Enter Master Password and rotate the handle to open the door



Enable and Disable Passage Mode

How to Enable Passage Mode

- Master Password # 5 # 00 #

How to Disable Passage Mode

- Set Auto-Lock Time

Turn Sound On/Off

To Mute

Enter Master Password # 6 # 1 #

To Turn Sound On

Enter Master Password # 6 # 2 #