
ADVANCED DIGITAL LOCK

INSTRUCTION



English



French



Swedish



Italian



German




Spanish


Global Quality Certificates **CE** RoHS

OVERVIEW


EDL77

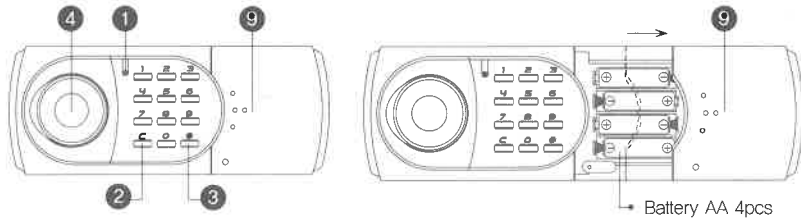

R2

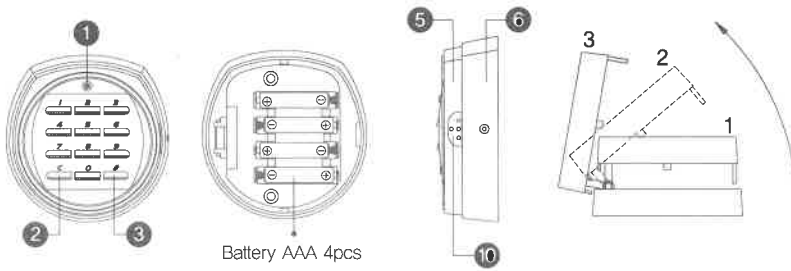

Door Back

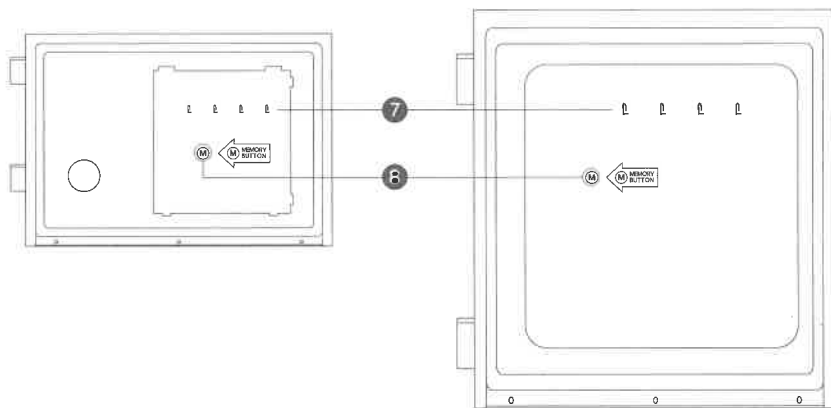



English

- | | |
|---|--|
| <ul style="list-style-type: none"> ① LED ② C Button (Start Button) ③ # Button (Finish Button) ④ Knob / Key / Handle ⑤ Upper Part ⑥ Lower Part | <ul style="list-style-type: none"> ⑦ Key Hanger ⑧ Memory Button ⑨ Battery Cover : Slide the battery housing cover to the right to open and load batteries. ⑩ Opening Mark : Press the opening mark and move it leftward to open upper round. |
|---|--|



French

- | | |
|--|--|
| <ul style="list-style-type: none"> ① LED ② Touche C (Touche de début de procédure) ③ Touche # (Touche de fin de procédure) ④ Poignée / D'ouverture ⑤ Section circulaire avant ⑥ Section circulaire arrière | <ul style="list-style-type: none"> ⑦ Porte clés ⑧ Touche de mémoire ⑨ Cache piles : Faire coulisser le cache piles vers la droite pour ouvrir et insérer les piles. ⑩ Marque d'ouverture : Appuyer sur la marque d'ouverture et faire basculer vers la gauche pour ouvrir le logement des piles. |
|--|--|



Swedish

- | | |
|--|--|
| <ul style="list-style-type: none"> ① LED ② C Knapp (Start Knapp) ③ # Knapp (Avslutningsknapp) ④ Kod / Key / Handtaget ⑤ Yttre grå del ⑥ Inre grå del | <ul style="list-style-type: none"> ⑦ Nyckel krok ⑧ Memory Knapp ⑨ Batterilocket : Skjut batterilocket till höger för att öppna och sätta batterier på pils. ⑩ Öppningsmarkering : Tryck på markeringen och vrid åt vänster för att öppna låset |
|--|--|



Italian

- | | |
|---|---|
| <ul style="list-style-type: none"> ① LED ② Tasto di termine ③ Tasto di avvio ④ Manopola / Chiave / Maniglia ⑤ Sezione circolare frontale ⑥ Sezione circolare posteriore | <ul style="list-style-type: none"> ⑦ Portachiavi ⑧ Pulsante "M" di programmazione ⑨ Vano batterie : Per aprire far scorrere lateralmente verso destra il coperchio e procedere alla sostituzione delle batterie. ⑩ Apertura mark : Premere il contrassegno di apertura ed oscillare a sinistra per mostrare il vano delle batterie. |
|---|---|



German

- | | |
|---|--|
| <ul style="list-style-type: none"> ① LED ② C-Taste (Startknopf) ③ #-Taste (Rautetaste) ④ Drehknopf / Schlüssel / Griff ⑤ Gehäusefront ⑥ Gehäuserückwand | <ul style="list-style-type: none"> ⑦ Schlüsselbrett ⑧ Resetknopf (Memorytaste) ⑨ Batteriefach : Schieben Sie den Batteriefachdeckel zum Öffnen nach rechts und legen Sie die Batterien ein. ⑩ Öffnungsmarkierung : Drücken Sie auf die Markierung und ziehen Sie den Batteriefachdeckel zum Öffnen nach links. |
|---|--|




Spanish

- | | |
|---|---|
| <ul style="list-style-type: none"> ① LED ② Tecla de inicio ③ Tecla de finalización ④ Mando / Llave / Pomo ⑤ Parte delantera ⑥ Parte trasera | <ul style="list-style-type: none"> ⑦ Ganchos para colgar llaves ⑧ Botón de memoria ⑨ Tapa del compartimento de pilas. Deslice la tapa hacia la derecha para abrir. ⑩ Marca de apertura : Para abrir el compartimento de pilas, presione sobre la marca de apertura y tire hacia la izquierda. |
|---|---|

1 How to open?

- Step 1. Press " C " button
- Step 2. Press factory code " 1 2 3 4 "
- Step 3. Press " # " button
- Step 4. Turn knob (Key or Handle) clockwise and open the door while melody rings.



-  1 : In case that wrong code is tried, it sounds Bi Bi Bi Bi.
- 2 : If wrong codes are tried over 5 times, the lock gets paralysed and doesn't work.

- **Paralysis Check** : ① No sound but LED flickers when each button pushed.
②    (LED flickers with Bi sound)

- **How to release the lock from paralysis ?**

Enter the original code twice consecutively as in the opening procedure.

EX)       →       

- Scramble numbers before and/or after the code can be used for more security.

2 How to close?

1. Home Safe(EN,EK) : Close the door, turn knob(or key) counter-clockwise.
2. Office Safe(EH) : Close the door. Then it is locked automatically.
3. Office Safe(EHK) : Close the door, and turn the key counter-clockwise by 360° to take it out.


- In case of EHK, if you want to use digital lock only, please turn the metal key clockwise by 360° and take it out.

3 How to enter 1st code?

- Step 1. Press " M " button
- Step 2. Press New Code buttons (4 digits min to 16 digits max)
- Step 3. Press " # " button (Melodic tone)

EX) If a new code is decided 2 1 0 0, press buttons as below. M 2 1 0 0 # (Melodic tone)




-  To confirm if the code is exactly entered, press the code in opening procedures prior to closing door.
For example, in case of your code 4 4 0 0, press button C 4 4 0 0 #.
If the procedure is properly done, melody rings for 3 seconds.

4 How to enter 2nd code?

- Step 1. Press " M " button
- Step 2. Press " 2 " button
- Step 3. Press " # " button
- Step 4. Press 2nd New Code buttons (4 digits min to 16 digits max)
- Step 5. Press " # " button (Melodic tone)



-  To confirm if the code is exactly entered, press the code in opening procedures prior to closing door.
For example, in case of your code 4 4 0 0, press button C 4 4 0 0 #.
If the procedure is properly done, melody rings for 3 seconds.

5 How to erase the 2nd code?

- Step 1. Press " M " button
- Step 2. Press " # " button
- Step 3. Press " 2 " button
- Step 4. Press " # " button (Melodic tone)



6 When to replace batteries?

1. If you hear abnormal 'Bi-ric', not 'Beep' sound when you press any button.
2. Door is not opened in spite of exact code entered.

- Battery life span : 2 years (In case of three door openings a day)
EDL77 : 1.5V AA Alkaline 4pcs / REDL2 : 1.5V AAA Alkaline 4pcs

- ★ Insulated containers are intended to release moisture to protect paper records during a fire. Therefore **the door should be opened frequently** to permit free circulation of air.
- ★ Stamps, coins, films, photographs, etc., must be placed in **friction lid containers** or **heavy duty(boil proof) plastic bags** and **wrapped in aluminum foil** to prevent moisture damage.